

GENERAL

	page
GENERAL REPAIR INSTRUCTIONS	1-2
ABBREVIATIONS USED IN THIS MANUAL.....	1-3
VEHICLE LIFT AND SUPPORT LOCATIONS	1-4
SYMBOL MARKS	1-5

GENERAL REPAIR INSTRUCTIONS

1. Use fender, seat, and floor covers to keep the car clean and prevent damage.
2. During disassembly, keep parts in order for reassembly.
3. Before performing electrical work, disconnect the cable to the positive (+) battery terminal.
4. Always replace cotter pins, gaskets and O-rings with new ones.
5. Always use sealer on gaskets to prevent leaks.
6. Carefully observe all specifications for bolt torques. Always use a torque wrench.
7. Use genuine Toyota parts.
8. If the vehicle is to be jacked up only at the front or rear end, be sure to block the wheels in order to ensure safety.
9. After the vehicle is jacked up, always support it on stands. It is extremely dangerous to do any work on the vehicle raised on jack alone, even for a small job that can be finished quickly.
10. Use of a special service tools (SST) may be required, depending on the nature of the repair. Be sure to use SST where specified and follow the proper work procedure. A list of the SST is found at the back of this manual.

ABBREVIATIONS USED IN THIS MANUAL

For convenience, the following codes are used in this manual.

Abbreviation	Term	Definition
RH	Right Hand	
LH	Left Hand	
SST	Special Service Tool	This term designates tools that have been manufactured specially for the servicing of this vehicle. Their part numbers are shown in the text enclosed by [].
STD	Standard	This term refers to the dimension of the part when originally manufactured.
O/S	Oversize	Sizes larger than STD are indicated as O/S.
U/S	Undersize	Sizes smaller than STD are indicated as U/S.
MP	Multipurpose	Use in the case of MP grease.
W/	With	
W/O	Without	
M/T	Manual Transmission	
A/T	Automatic Transmission	
T	Tightening Torque	
RHD	Right Hand Drive	
LHD	Left Hand Drive	


VEHICLE LIFT AND SUPPORT LOCATIONS

Jack Points

Fig. 1-1 Front



Fig. 1-2 Rear

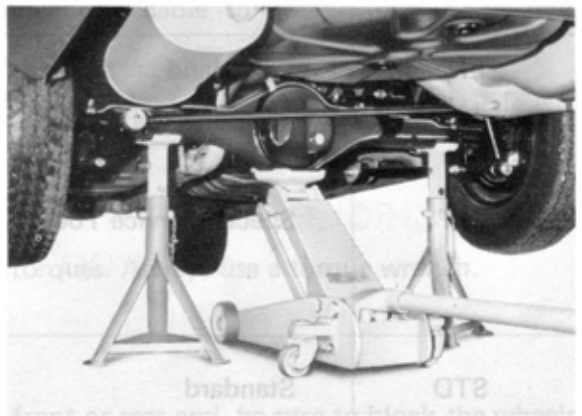

Stand Locations

Fig. 1-3 Front


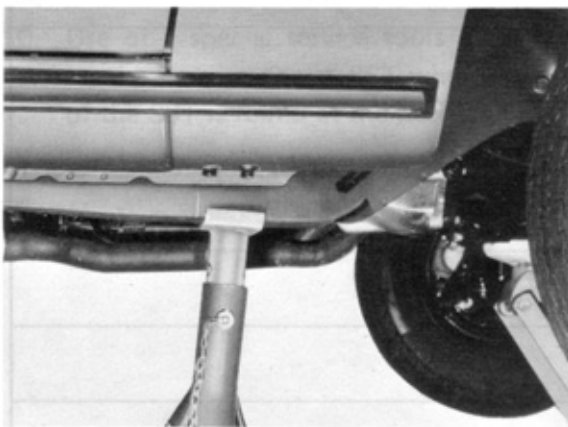


Fig. 1-4 Rear



SYMBOL MARKS

The following symbols have been adapted for simplicity and for easy comprehension.

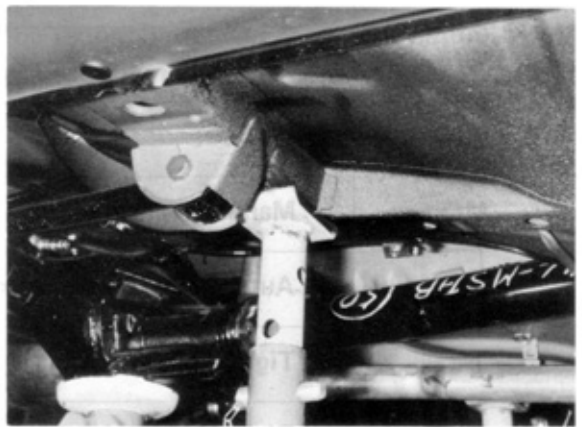

ASSEMBLE



DISASSEMBLE



INSTALL



REMOVE



INSPECT



MEASURE



TIGHTEN



CLEAN



IMPORTANT

MEMO
