

SST(SPECIAL SERVICE TOOL)

SST(SPECIAL SERVICE TOOL)

Illustration	Tool No.	Tool Name
	09812-14010	Wrench Set, Door Hinge Bolt (for CELICA)
	09812-30011	Wrench Set, Door Hinge Bolt (for CARINA)
	09806-30010	Remover, Windshield Molding
	09805-20011	Tool, Luggage Compartment Door Torsion Bar
	09808-12010	Wrench, Fuel Gauge
	09810-25010	Wrench, Switch Lock Nut

WIRING DIAGRAM (Except U.S.A. & CANADA)

INDEX

CARINA & CELICA ELECTRICAL WIRING DIAGRAM (Except U.S.A. & CANADA)

GRID LOCATION	COMPONENTS	GRID LOCATION	COMPONENTS
G-2 B-3	ALTERNATOR AMMETER (OPT)	F-13 G-13	TURN SIGNAL, REAR, LH · RH TURN SIGNAL INDICATOR, LH · RH
D-3	BATTERY	F-16 C-9 D-2 E-13 D-16 F-14 F-17	MOTORS: HEADLIGHT CLEANER (For Sweden) HEATER BLOWER STARTER WASHER, FRONT WASHER, REAR (OPT) WIPER, FRONT WIPER, REAR (OPT)
C-10 D-10 C-6	CIGARETTE LIGHTER CLOCK COMBINATION METER	F-6	OIL PRESSURE SENDER & GAUGE
G-9 D-4	DEFOGGER, REAR WINDOW DISTRIBUTOR	C-19 E-2	RADIO & TAPE PLAYER (OPT) REGULATOR
E-8 F-8 D-7	EMISSION CONTROL SYSTEM (For 18R-C Engine): EMISSION CONTROL COMPUTER SPEED SENSOR VACUUM SWITCHING VALVE	C-18 D-16 C-5	RELAYS: LIGHT CONTROL HEADLIGHT CLEANER (For Sweden) MAIN
C-13 E-6 G-6 G-7 A-5 C-3	FLASHER, TURN SIGNAL & HAZARD FUEL CUT SOLENOID FUEL GAUGE FUEL SENDER FUSE BOX FUSIBLE LINK	D-20 E-19	SPEAKER, FRONT SPEAKER, REAR
E-12 B-4	HORN, LO · HI IGNITION COIL	C-8 G-5 E-10 E-10 F-4 G-19 H-11 F-15 E-18 E-9 F-12 A-1 F-15 F-10 B-1 F-6 G-14	SWITCHES: BACK-UP LIGHT BRAKE WARNING (For R.H.D VEHICLE) DECK ROOM LIGHT DEFOGGER DIFFERENTIAL (For L.H.D VEHICLE) DIMMER DOOR GLOVE BOX LIGHT (For GT) LIGHT CONTROL HEATER BLOWER HORN IGNITION INSPECTION LIGHT (For GT) INTERIOR LIGHT NEUTRAL SAFETY (For A/T) OIL PRESSURE PANEL LIGHT CONTROL (For Australia & GT)
D-15 G-9 E-6 C-15 H-14 D-15 D-15 E-10 E-6 F-11 F-15 F-20 E-15 G-20 F-15 F-10 H-15 F-11 E-10 F-6 E-15 G-18 E-15 H-14 F-13 F-13	LIGHTS: AUTOMATIC T/M INDICATOR BACK-UP, LH · RH BRAKE WARNING CIGARETTE LIGHTER CLEARANCE, FRONT, LH · RH CLOCK COMBINATION METER DECK ROOM DISCHARGE WARNING DOOR COURTESY (For Celica) GLOVE BOX (For GT) HEADLIGHT, LH · RH HEATER CONTROL HIGH BEAM INDICATOR INSPECTION (For GT) INTERIOR LICENSE PLATE LUGGAUGE ROOM (For L/B) MAP OIL PRESSURE WARNING RADIO STOP, LH · RH SWITCH KNOB TAIL, LH · RH TURN SIGNAL, SIDE, LH · RH TURN SIGNAL, FRONT, LH · RH	F-4 D-17 C-17, F-5 C-13 D-14	PARKING BRAKE REAR WIPER & WASHER (OPT) STOP LIGHT TURN SIGNAL & HAZARD WINDSHIELD WIPER AND WASHER
		D-6 F-5 G-6 G-6	TACHOMETER VOLTAGE REGULATOR WATER TEMPERATURE GAUGE WATER TEMPERATURE SENDER

— Note —

When reading the wiring diagram, following should be noted.

- WIRING COLOR CODE IS SHOWN WITH ALPHABETICAL LETTER/S.
THE FIRST LETTER INDICATES THE BASIC COLOR FOR THE WIRE, AND THE SECOND LETTER INDICATES THE SPIRAL LINE COLOR.
B = BLACK O = ORANGE W = WHITE
G = GREEN R = RED Y = YELLOW
L = LIGHT BLUE
EXAMPLE : RG, IS FOR RED AND A GREEN LINE.
- LEGEND IN THE BRACKET [] OF THE WIRING DIAGRAM SHOWS THE GRID LOCATION OF MATING CONNECTION.
- BROKEN LINES IN THE WIRING DIAGRAM ARE FOR VARIED MODELS OR OPTIONAL EQUIPMENT.

[illegible]

WIRING DIAGRAM (For U.S.A. & CANADA)

INDEX



CELICA ELECTRICAL WIRING DIAGRAM (For U.S.A. & CANADA) – 1976 Model


GRID LOCATION	COMPONENTS	GRID LOCATION	COMPONENTS
G-2	ALTERNATOR	H-17	MARKER, FRONT SIDE, LH · RH
D-3	BATTERY	H-20	MARKER, REAR SIDE, LH · RH
C-15	CIGARETTE LIGHTER	F-7	OIL PRESSURE WARNING
E-15	CLOCK	F-20	RADIO
D-7	COMBINATION METER	H-23	STOP, LH · RH
C-5	CONDENSER	E-20	SWITCH KNOB
E-14	COOLER IDLE-UP	H-18	TAIL, LH · RH
H-13	DEFOGGER, REAR WINDOW	F-17	TURN SIGNAL, FRONT, LH · RH
D-4	DISTRIBUTOR	G-17	TURN SIGNAL, REAR, LH · RH
		G-17	TURN SIGNAL INDICATOR, LH · RH
		D-14	MAGNET CLUTCH (For Cooler)
G-9	EMISSION CONTROL SYSTEM:	C-13	MOTORS:
F-9	CHOKE HEATER COIL	D-2	HEATER BLOWER
E-11	CHOKE RELAY	E-18	STARTER
G-7	EMISSION CONTROL COMPUTER	G-18	WASHER
G-11	EXH. TEMP WARNING LIGHT		WIPER
H-10	INSPECTION CONNECTOR	D-25	RADIO (OPT)
H-10	SPEED SENSOR	F-2	REGULATOR
H-10	THERMO S/W For Coolant	D-8	RESISTER (For Fuel Pump)
H-10	THERMO SENSOR For CCo (Calif.)		
D-10	VACUUM SWITCHING VALVE	D-13	RELAYS:
	E.S.P. SYSTEM:	D-9	COOLER
G-22	ANALYZER COMPUTER	C-24	FUEL PUMP
F-21	BRAKE PAD WEAR SENSOR	D-17	LIGHT CONTROL
H-21	COOLANT LEVEL SENSOR	C-6	HORN
G-21	ELECTROLYTE LEVEL SENSOR	E-4	MAIN RELAY (For Brake Warning)
G-21	ENGINE OIL LEVEL SENSOR		
H-23	INDICATOR PANEL	H-12	SEAT BELT SYSTEM:
D-22	LIGHT FAILURE RELAY	H-12	BUZZER (For Seat Belt Warning)
F-23	OK SHIFT SWITCH	F-12	SEAT BELT BUCKLE SWITCH
F-23	PRIMARY WARNING LIGHT	G-12	SEAT BELT RELAY
G-21	VACUUM WARNING SWITCH		SEAT BELT WARNING LIGHT
H-21	W. WASHER LEVEL SENSOR		
D-18	FLASHER, TURN SIGNAL & HAZARD	D-25	STEREO TAPE PLAYER (OPT)
E-8	FUEL CUT SOLENOID	E-26	SPEAKER, FRONT
H-7	FUEL GAUGE	F-25	SPEAKER, REAR
D-10	FUEL PUMP		
H-8	FUEL SENDER	C-11	SWITCHES:
A-6	FUSE BOX	H-6	BACK-UP LIGHT
C-3	FUSIBLE LINK		BRAKE FLUID LEVEL WARNING
E-17	HORNS, LO · HI	F-14	DEFOGGER
D-5	IGNITER	G-4	DIFFERENTIAL
C-4	IGNITION COIL	H-25	DIMMER
C-4	IGNITION COIL DIODE (For Calif.)	G-16	DOOR
		F-20	GLOVE BOX LIGHT
D-20	LIGHTS:	E-24	LIGHT CONTROL
H-11	AUTOMATIC T/M INDICATOR	E-13	HEATER BLOWER
F-7	BACK-UP, LH · RH	E-17	HORN
D-20	BRAKE WARNING	B-1	IGNITION
H-18	CIGARETTE LIGHTER	G-15	INTERIOR LIGHT
E-20	CLEARANCE, FRONT, LH · RH	C-1	NEUTRAL SAFETY
D-20	CLOCK	F-8	OIL PRESSURE
E-7	COMBINATION METER	G-19	PANEL LIGHT CONTROL
F-16	DISCHARGE WARNING	G-5	PARKING BRAKE LIGHT
F-20	DOOR COURTESY	C-23	STOP LIGHT
F-25	GLOVE BOX	C-18	TURN SIGNAL & HAZARD
E-20	HEADLIGHT, LH · RH	C-16	UNLOCK WARNING
H-25	HEATER CONTROL	E-18	WINDSHIELD WIPER AND WASHER
G-15	HIGH BEAM INDICATOR		
H-19	INTERIOR	E-7	TACHOMETER
F-15	LICENSE PLATE	E-16	UNLOCK WARNING BUZZER
E-15	LUGGAUGE ROOM	G-7	WATER TEMPERATURE GAUGE
	MAP	G-8	WATER TEMPERATURE SENDER

— Note —

When reading the wiring diagram, following should be noted.

1. WIRING COLOR CODE IS SHOWN WITH ALPHABETICAL LETTER/S.
THE FIRST LETTER INDICATES THE BASIC COLOR FOR THE WIRE, AND, THE SECOND LETTER INDICATES THE SPIRAL LINE COLOR.
B = BLACK
G = GREEN
L = LIGHT BLUE
O = ORANGE
R = RED
W = WHITE
Y = YELLOW
EXAMPLE : RG, IS FOR RED AND A GREEN LINE.
2. LEGEND IN THE BRACKET [] OF THE WIRING DIAGRAM SHOWS THE GRID LOCATION OF MATING CONNECTION.
3. BROKEN LINES IN THE WIRING DIAGRAM ARE FOR VARIED MODELS OR OPTIONAL EQUIPMENT.

CELICA ELECTRICAL WIRING DIAGRAM (For U.S.A. & CANADA) – 1976 Model

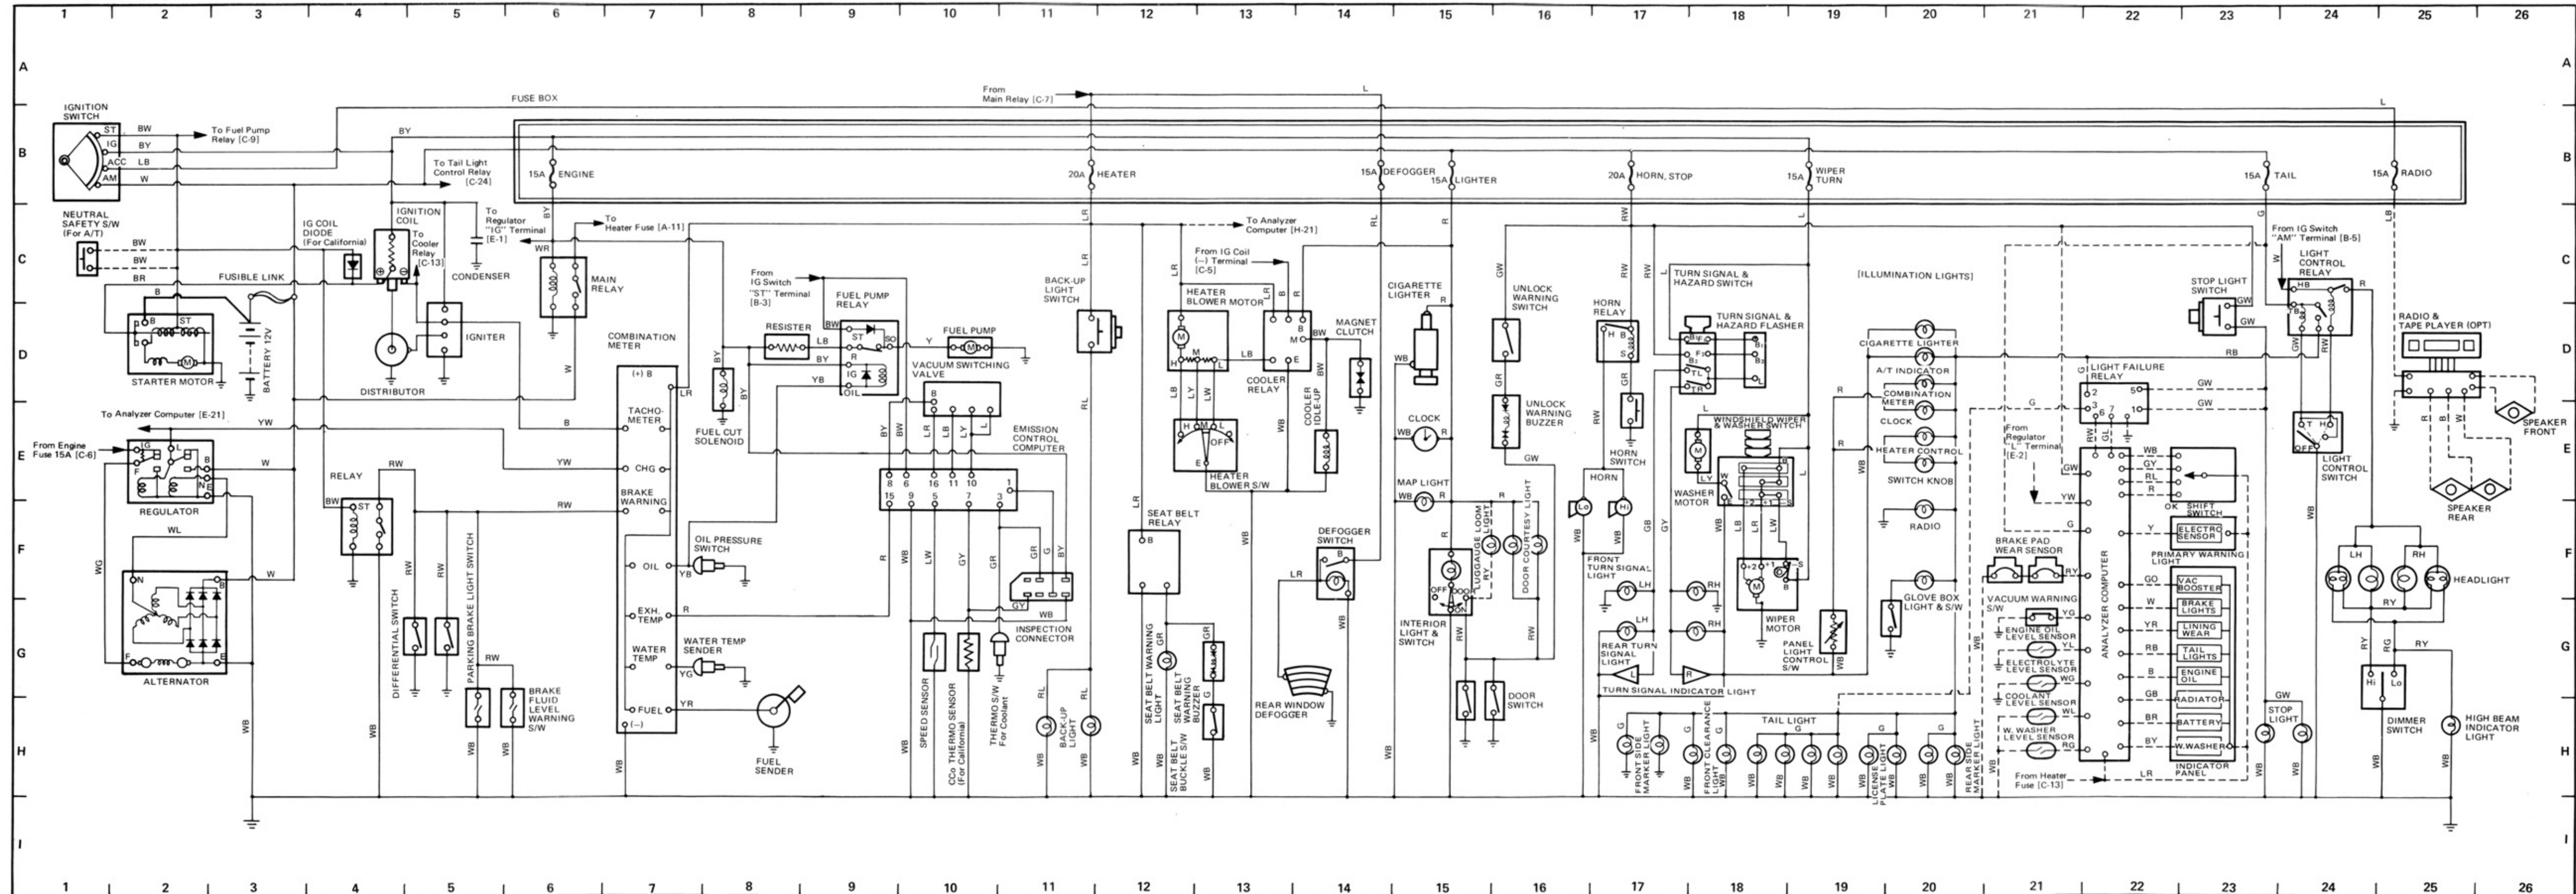

Prepared by

TOYOTA MOTOR SALES CO., LTD

Export-Technical Department

Haruhi Center

Haruhi-mura, Nishikasugai-gun

Aichi Pref., Japan

First Printing December., 1975

Publication No.98140

Printed in Japan

