

TOYOTA

COROLLA & TRUENO

REPAIR MANUAL

BODY

 TOYOTA MOTOR SALES CO., LTD.

FOREWORD

This repair manual describes the removal, installation, adjustment and maintenance procedures required for servicing body components and body electrical system of the TOYOTA COROLLA and TRUENO SERIES.

For inspection and repair methods for the Toyota Corolla and Trueno series engine and chassis, refer to the following repair manuals.

T & 2T Engine Repair Manual (Pub. No.98060-1)

3K-H Engine Repair Manual (Pub. No.98119)

Corolla and Trueno Chassis Repair Manual (Pub. No.98120)

This manual has been edited primarily for the right hand model, as of July 1974.

The specifications and repair procedures contained herein are subject to change at any time without previous notice.

TOYOTA MOTOR SALES CO., LTD.

SECTION INDEX

NAME	SECTION
GENERAL	1
BODY	2
BODY ELECTRICAL	3
SST	4