## **TOYOTA**

## RMISSION CONTROL

REPAIR MANUAL

1975 MODEL

**FINAL MOTOR SALES CO., LTD.** 

## **FOREWORD**

Basic construction, operation, repair procedures, service data and inspection charts of Toyota Emission Control Systems are fully explained in this manual for service personnel of Toyota Authorized Distributors and their dealers. This manual should be used as a guide to understand Toyota Emission Control Systems and to perform proper maintenance and service so that vehicle performance meets the federal air pollution control standards.

In case Toyota Emission Control System differs for California and other states, it is clearly indicated each time.

All information, illustrations and specifications contained in this manual are based on the latest information available at the time of publication. Toyota reserves the right to make changes in designs and specifications without previous notice.

Toyota Motor Sales Co., Ltd.

© 1974 TOYOTA MOTOR SALES CO., LTD.

## SECTION INDEX

NAME	SECTION
INTRODUCTION	0
CONTROL PARTS COMMON TO ALL SYSTEM	
POSITIVE CRANKCASE VENTILATION (PCV) SYSTEM	2
FUEL EVAPORATIVE EMISSION CONTROL (EVAP) SYSTEM	3
THROTTLE POSITIONER (TP) SYSTEM	4
SPARK DELAY SYSTEM	5
TRANSMISSION CONTROLLED SPARK (TCS) SYSTEM	6
EXHAUST GAS RECIRCULATION (EGR) SYSTEM	7
AIR INJECTION (AI) SYSTEM	8
CATALYTIC CONVERTER (CCo) SYSTEM	9
CHOKE OPENER SYSTEM	10
AUXILIARY ACCELERATION PUMP (AAP) SYSTEM	
POWER VALVE CONTROL SYSTEM	12
AUTOMATIC HOT AIR INTAKE (HAI) SYSTEM	13
AUTOMATIC CHOKE SYSTEM	14
TRANSISTORIZED IGNITION SYSTEM	15
DUAL POINT DISTRIBUTOR	16
HEAT CONTROL VALVE	7
PERIODIC MAINTENANCE	18
REPAIR PROCEDURE FOR EXCESSIVE CO AND HC	19
SPECIFICATONS	20
SCHEMATIC DRAWINGS	21
SPECIAL SERVICE TOOL (SST)	22