

TOYOTA

Repair Manual



TOYOTA TIARA

TOYOTA MOTOR SALES CO., LTD.

TOYOTA REPAIR MANUAL



TOYOPET TIARA TOYOPET CORONA

FOREWORD

This manual has been prepared to provide complete informations on the maintenance and repair of various parts of Models RT20L, RT20 Toyopet Tiara and PT20 Toyopet Corona.

Step-by-step procedures supplemented with many illustrations for disassembly, inspection, and repair are presented throughout this manual to serve as a ready reference book for servicemen.

At the top of each page the name and section number are given to help user locate desired information.

The informations on R type Engine have been excluded as they are provided in the Engine repair manual.

All informations, illustrations, and specifications were the best available at the time of publication.

The modifications and changes effected thereafter will be covered in the Service News Bulletin published by the Service Division.

The company reserves the right to make changes in specifications without previous notice at any time.

SERVICE DIVISION

TOYOTA MOTOR SALES CO., LTD.

AICHI PREF., JAPAN

SECTION INDEX	
NAME	SECTION
CLUTCH	1
TRANSMISSION	2
PROPELLER SHAFT & UNIVERSAL JOINT	3
REAR AXLE & DIFFERENTIAL	4
REAR SUSPENSION	5
FRONT AXLE & FRONT SUSPENSION	6
BRAKE	7
STEERING	8
CHASSIS ELECTRICAL	9
BODY	10